



PRODUCT SPECIFICATIONS – DANCEDECK BRAND FLOOR CLEANER



Ingredients: Deionized water, vegetable-based cleansing and sudsing agents, mild surfactants, emulsifiers

Directions for Use: For most cleaning jobs, use 2 ounces (1/4 cup) of *DanceDeck Cleaner* per gallon of warm water. For heavily soiled floors and surfaces, dilute 4-8 ounces per gallon of water. Mop or wipe surface as needed; no rinsing is necessary. *If unsure about a surface, test in an inconspicuous area before using.* See front panel for cautions; mild eye irritant.

- DanceDeck Brand Floor Cleaner can be used on TimberDeluxe, TimberPro, and all DazzleDeck floors. Developed for professional dance competition floors, it is safe for all non-porous hard floors, including sealed wood flooring.
- Floor Cleaner is soy-based, making it environmentally friendly.
- Floor Cleaner is a concentrated fast-drying, no-rinse formula with no dangerous or noxious odors
- An effective and concentrated cleaner developed for people with allergies, asthma and multiple chemical sensitivities.
- Free of ammonia, chlorine, fragrances, phosphates, dyes, animal by-products, petrochemicals and other known common triggers of respiratory or skin irritations.
- Safe for use in closed environments; will not compromise air quality.
- Made with naturally occurring renewable resources which break down safely and rapidly.
- A concentrated, no rinse formula which will not leave a dulling haze.
- Can also be used on a variety of hard surfaces including vinyl, countertops, appliances and more!
- DanceDeck Floor Cleaner is a thin, light amber liquid with characteristic natural soap scent.



Your Exhibit Flooring Specialists

50 East 42nd Street - 14th Floor New York, NY 10017
212-953-1116 -- 212-953-1117 Fax -- 800-569-2751 Toll Free